

LASER 38mm

MODEL: LAS38

INSTRUCTIONS SHEET

PAGE: 1 of 1

IMPORTANT - READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.


THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL APPLICABLE LOCAL CODES, BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT, AND THE HAZARDS INVOLVED. PROPER GROUNDING IS REQUIRED FOR SAFETY.

⚠ DISCONNECT THE MAIN LINE BEFORE WIRING SECONDARY CONNECTORS.

REMODEL INSTALLATION (RF) - REMOTE DRIVER (REM)

A- MAKE A CUT-OUT OPENING (SEE DIMENSIONS BELOW).

A

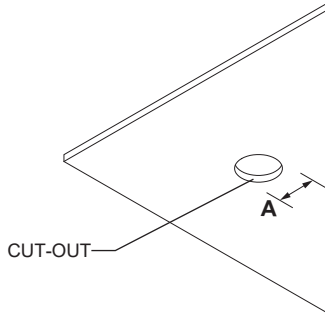

Model	Cut-out dimensions (A)	Ceiling thickness	Clearance
LASER 38	Ø 1½" (Ø 38mm)	0.04" to 1" (1 to 25mm)	3¾" (91mm)

FIXTURE INSTALLATION

A- MAKE ALL NECESSARY CONNECTIONS (FOLLOWING WIRING DIAGRAM AND POLARITY MARKING) USING THE QUICK CONNECTORS (INCLUDED).


B- HOLD THE (2) CLIPS UPWARD AND INSERT FIXTURE INTO CUT-OUT.

* LEAVE AT LEAST 2"(50mm) ON EACH SIDE OF THE FIXTURE TO ALLOW ACCEPTABLE HEAT DISSIPATION.

A + B

WIRING DIAGRAM

Multiple luminaires must be connected in series (home run or fixture chain)

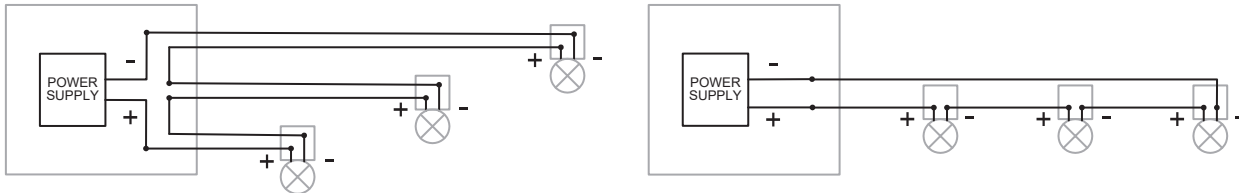

LED +	RED
LED -	BLACK

