

IMPORTANT - READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL APPLICABLE LOCAL CODES, BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT, AND THE HAZARDS INVOLVED. PROPER GROUNDING IS REQUIRED FOR SAFETY.

⚠ DISCONNECT THE MAIN LINE BEFORE WIRING SECONDARY CONNECTORS.

SOLO UNIT INSTALLATION INTEGRAL DRIVER (120 / 277V) DIMMING TRIAC/ELV (10%) OR 0-10V (1%)

A- PREPARE THE CEILING WITH ANCHOR SCREWS (SEE TABLE ON PAGE 2).

B- SEE DETAIL 1:

1- PASS WIRES THROUGH THE CANOPY.

2- MAKE THE NECESSARY WIRE CONNECTIONS (SEE WIRING DIAGRAM) USING TWIST CONNECTORS (NOT INCLUDED).


FOR D01 DIMMING: WIRES MUST BE RUN THROUGH A SEPARATE KNOCKOUT HOLE FROM JUNCTION BOX.

3- INSTALL THE UNIVERSAL CROSSBAR USING PHILLIPS SCREWS (INCLUDED) AND THE CANOPY USING PHILLIPS SCREWS (INCLUDED).


C- INSTALL THE UNIT TO THE CEILING USING #8 SCREWS (INCLUDED) INTO THE ANCHOR SCREWS.

D- CONNECT THE LASER BLADES USING THE QUICK CONNECTORS (INCLUDED) AND SNAP THEM INTO THE UNIT.


FILL THE GAP WITH THE COVER PLATE.

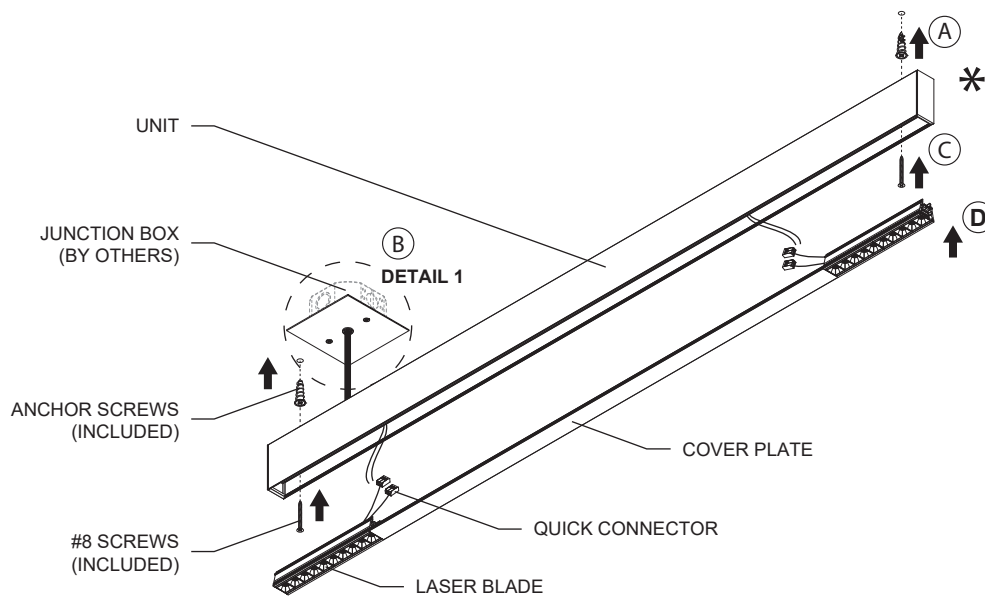

DETAIL 1

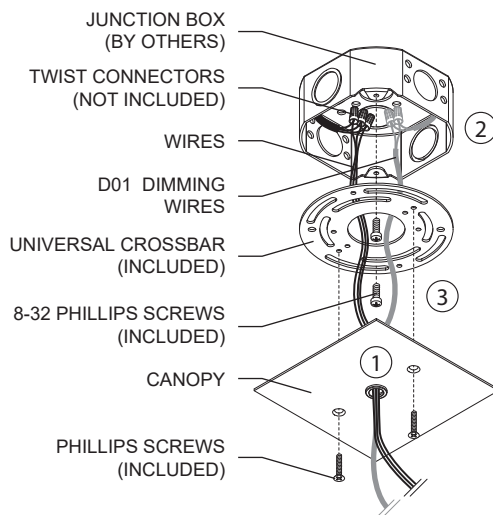


WIRING DIAGRAM*

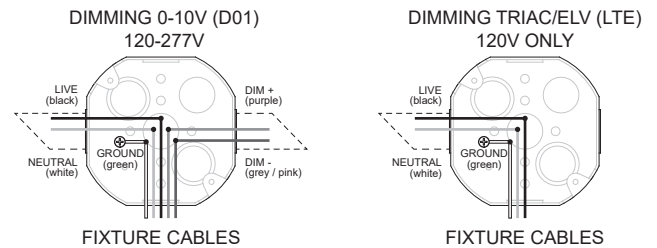


*for reference only

SURFACE ANCHOR POINTS DISTANCE

SOLO UNIT 4'

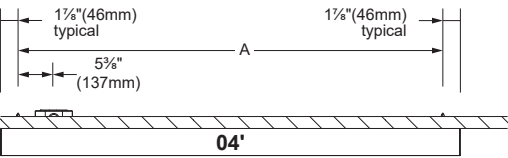

SOLO UNIT 8'

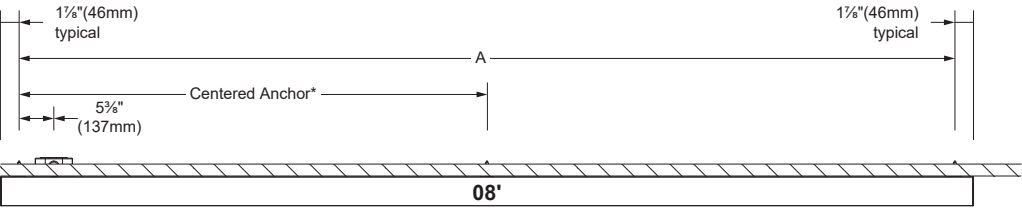

ANCHOR POINTS FOR LINEAR SURFACE ALL CONFIGURATIONS			
Nominal length	Actual length	Anchor distance (A)	Anchor qty
04'	4' (1.218m)	3'-8 ⁵ / ₁₆ " (1.125m)	2
08'	7'-11 ¹ / ₈ " (2.435m)	4'-8 ³ / ₁₆ " (2.342m)	3