

LASER BLADE LARGE

INSTALLATION SHEET

PAGE: 1 OF 1



TRIM : ILBL 1/2/3 - TR - XXX - M/F/WF/WW - 120/277 - XX LTE/D10
TRIMLESS : ILBL 1/2/3 - TL - XXX - M/F/WF/WW - 120/277 - XX LTE/D10

IMPORTANT - READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.
THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL APPLICABLE LOCAL CODES, BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT, AND THE HAZARDS INVOLVED. PROPER GROUNDING IS REQUIRED FOR SAFETY.

FIXTURE INSTALLATION INTEGRAL DRIVER (120V OR 277V) DIMMING TRIAC / ELV (LTE) OR 0-10V (D10)

- A - LOOSEN THE SCREW OF THE CONNECTION BOX AND ROTATE COVER.
B - INSTALL BX CABLE (NOT INCLUDED) WITH 6" OF WIRE IN THE CONNECTION BOX AND MAKE NECESSARY CONNECTIONS.
C - CLOSE CONNECTION BOX COVER AND SECURE WITH SCREW.

LIVE	BLACK
NEUTRAL	WHITE
≡	GREEN
DIM +	PURPLE
DIM -	GRAY OR PINK

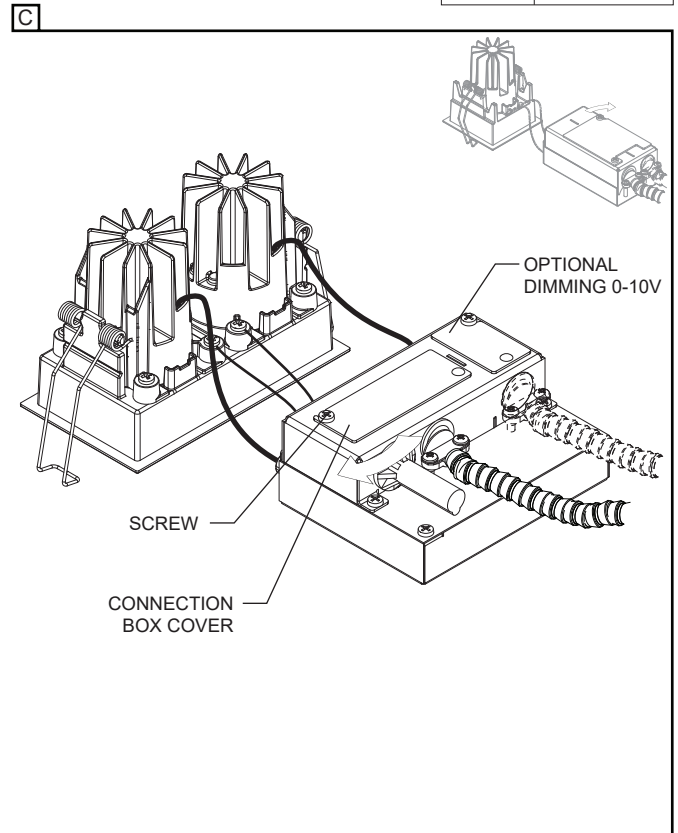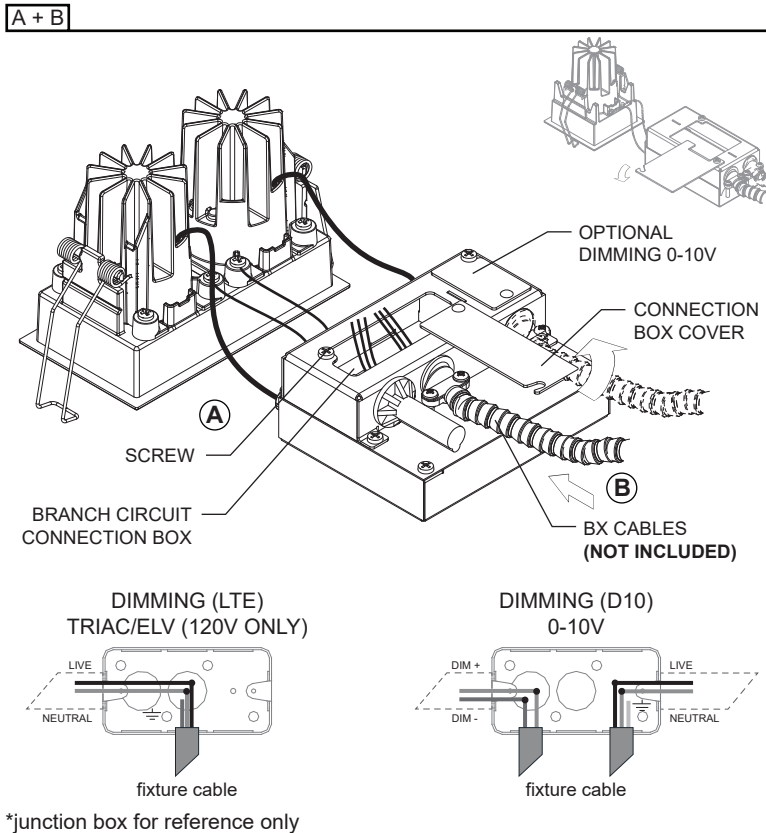

- D - INSERT THE CONNECTION BOX INTO CUT-OUT. CONNECTION BOX MUST SETTLE ON THE PLASTER FRAME AS SHOWN.
E - HOLD THE (2) CLIPS UPWARDS AND INSERT FIXTURE INTO CUT-OUT.

